

Fisher-Price®

Diaper Pail


Instructions

- Adult assembly required.
- Please save these instructions for future reference.


WARNING

- When using the Diaper Pail, make sure the lock knob is in the LOCK position to protect children from accidental drowning.
- Use NON-TOXIC deodorizing cakes.
- To avoid danger of suffocation, keep plastic bags away from children.


Assembly

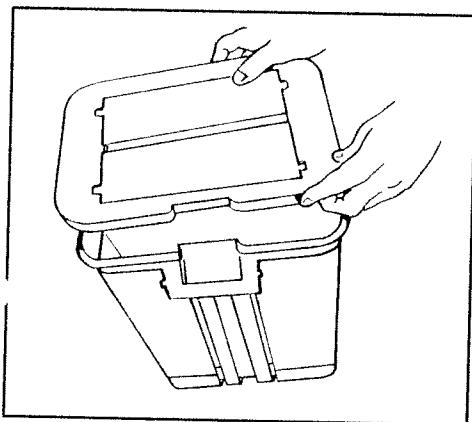

1. Place a plastic bag in the Diaper Pail, if desired.
2. Place the inner lid (with flip-down doors) on top of (and over top edge of plastic bag, if used) the Diaper Pail.

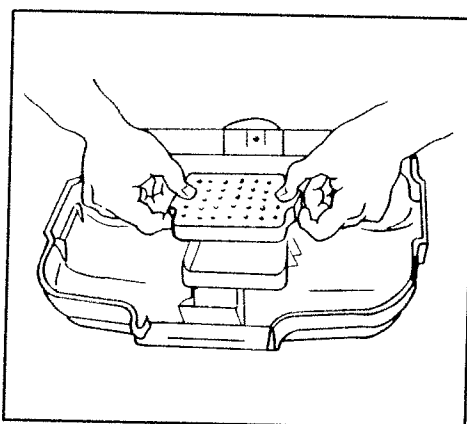


3. Open the deodorizer compartment in the outer lid. Insert a deodorizer cake and close the compartment.

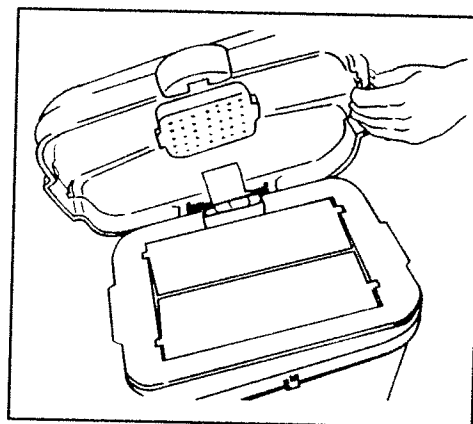

4. Snap the outer lid onto the Diaper Pail.
NOTE: The outer lid can be snapped into place before the inner lid.

Use

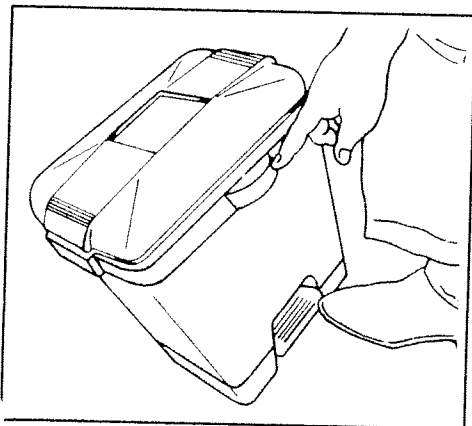

1. To open, turn the lock knob to the UNLOCK position.
2. Press the foot pedal to raise lid; release the foot pedal to close the lid.
3. Turn the lock knob to the LOCK position to close the Diaper Pail securely.

Cleaning

- Wash the Diaper Pail with a mild soap and water solution, and rinse thoroughly.

The LOCK and UNLOCK positions are indicated on the lock knob. Be sure to turn the lock knob to the LOCK position to close the Diaper Pail securely.

If you have any problems with this product, please call Fisher-Price Consumer Affairs at 1-800-432-KIDS (1-800-432-5437) between 8AM and 5PM Eastern time, Monday through Friday, or write to:

Fisher-Price
Attn: Consumer Affairs
636 Girard Avenue
East Aurora, New York 14052

In Canada, if you have any problems with this product, please write to:

Fisher-Price Inc.
Consumer Affairs Department
5300 Tomken Road
Mississauga, Ontario L4W 1P2

Fisher-Price®

Diaper Pail

 
Instructions

- Adult assembly required.
- Please save these instructions for future reference.


WARNING

- When using the Diaper Pail, make sure the lock knob is in the LOCK position to protect children from accidental drowning.
- Use NON-TOXIC deodorizing cakes.
- To avoid danger of suffocation, keep plastic bags away from children.


Assembly

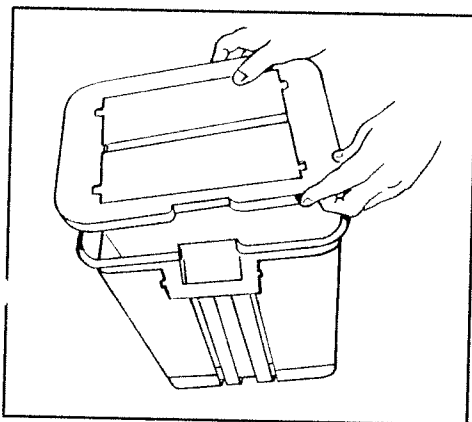

 1. Place a plastic bag in the Diaper Pail, if desired.
2. Place the inner lid (with flip-down doors) on top of (and over top edge of plastic bag, if used) the Diaper Pail.

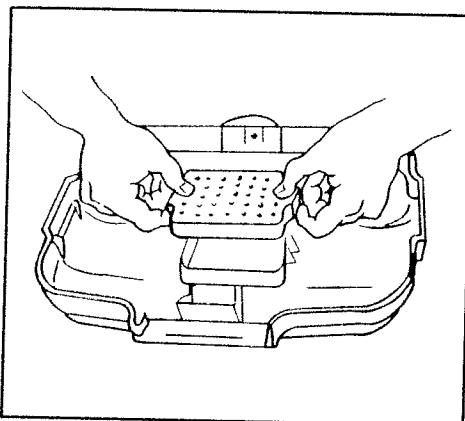


 3. Open the deodorizer compartment in the outer lid. Insert a deodorizer cake and close the compartment.

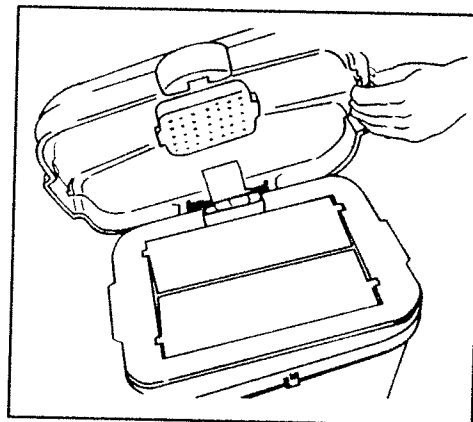

4. Snap the outer lid onto the Diaper Pail.
NOTE: The outer lid can be snapped into place before the inner lid.

 Use

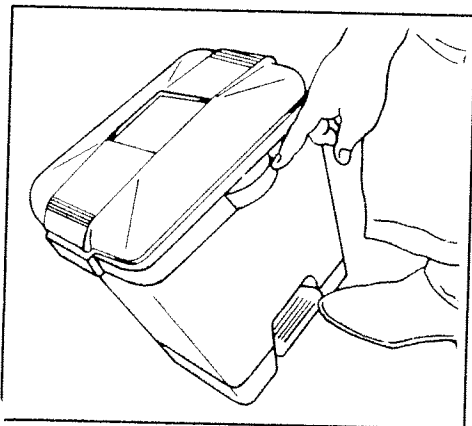

1. To open, turn the lock knob to the UNLOCK position.
2. Press the foot pedal to raise lid; release the foot pedal to close the lid.
3. Turn the lock knob to the LOCK position to close the Diaper Pail securely.

Cleaning

- Wash the Diaper Pail with a mild soap and water solution, and rinse thoroughly.

The LOCK and UNLOCK positions are indicated on the lock knob. Be sure to turn the lock knob to the LOCK position to close the Diaper Pail securely.

If you have any problems with this product, please call Fisher-Price Consumer Affairs at 1-800-432-KIDS (1-800-432-5437) between 8AM and 5PM Eastern time, Monday through Friday, or write to:

Fisher-Price
Attn: Consumer Affairs
636 Girard Avenue
East Aurora, New York 14052

In Canada, if you have any problems with this product, please write to:

Fisher-Price Inc.
Consumer Affairs Department
5300 Tomken Road
Mississauga, Ontario L4W 1P2